
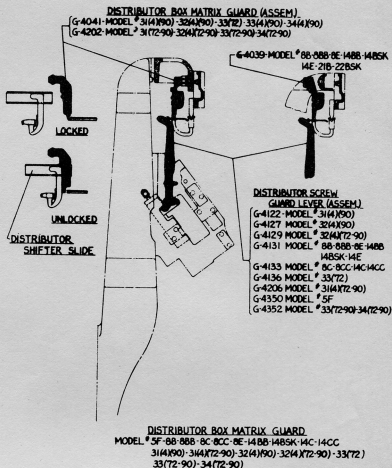


LINOTYPE IMPROVEMENT SHEET

NO. 285

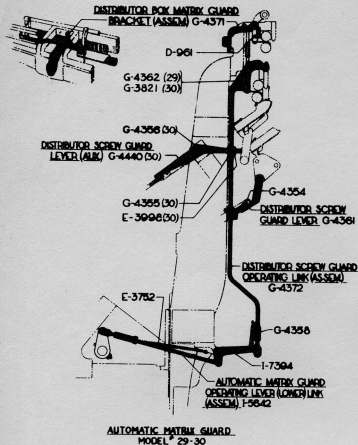

DISTRIBUTOR BOX MATRIX GUARD (ASSEMBLED), DISTRIBUTOR SCREW GUARD LEVER (ASSEMBLED) & AUTOMATIC MATRIX GUARD

The Distributor Box Matrix Guard (Assembled) is designed to prevent shifting of Magazine until Distributor Box and Distributor Bar are clear of matrices. The Distributor Screw Guard Lever (Assembled) prevents changing position of magazines when matrices are left on Distributor Bar. The Automatic Matrix Guard provides a safety against moving Main and Auxiliary Magazines up or down while matrices are still on Distributor Bars on both single and mixer Distributor Machines.

APPLIED IN FACTORY TO MODELS

New Model 5F, 31, 32, 33, 34, 35, 36 for Distributor Box Matrix Guard and Distributor Screw Guard Lever. New Models 29, 30 Machines for Automatic Matrix Guard.

OUTSTANDING MODELS

For application of Distributor Box Matrix Guard (Assembled) and Distributor Screw Guard Lever see Mailing Sheet #494, for Automatic Matrix Guard see Mailing Sheet #622.

First applied to Model 32(4)(90) - Serial #53436 for Distributor Box Matrix Guard and Distributor Screw Guard Lever. Model 29 - Serial #55576 for Automatic Matrix Guard.

MERGENTHALER LINOTYPE COMPANY, Brooklyn, N.Y.

September 9, 1949.

No. 285

Printed in U.S.A.