

Linotype Improvement Sheets Index

All-Purpose Linotype—

- 249—A-P.L. Surfacer—Automatic Shut Off Arrangement After Each Cast.
- 150—Assembler Stick (Italic 17).
- 160—Assembler Stick and Filling Piece Rack.
- 156—Assembler Stick Table Guide.
- 203—Copy Holder and Bracket for Matrix Cabinet.
- 222—Ejector Blade.
- 178—Elevator Jaw and Mold Cap (6-18 pt.).
- 174—Galley for T, L and Solid Slugs.
- 220—Knife (Back) Waste Metal Chute
- 151—Knife Wiper.
- 122—Leads, Casting 2 point.
- 152—Long Line Stick Sliding Jaw.
- 200—Matrix Cabinet Drawer.
- 132—Mold Cap Grooves.
- 145—Mold Cap Guides.
- 223—Mold Disk Pinion Driving Pins.
- 134—Mold Wiper.
- 138—Mouthpiece Wiper.
- 136—Mouthpiece Wiper Lever.
- 231—No. 3 Assembler Stick (Assembled) A-P.L.
- 182—Pinion (16) Tooth Motor Driving Pulley.
- 181—Slug Face Surfacer Bracket.
- 199—Slug Face Surfacer Cutter Spindle Quill
- 164—Adjuster Screw Stud and Handle.
- 219—Slug Face Surfacer Motor Pulley.
- 207—Slug Guide (R.H.) (Assembled) and Slug Cooling Slug Galley Cover.
- 165—Slug Saw Trimmer Drop Shelf.
- 164—Slug Saw Trimmer Sliding Table, Banking Block and Length Gauge.
- 221—Slug Saw Trimmer Sound Damper.
- 168—Slug Saw Trimmer Vise.
- 135—Vise Jaw, Right Hand.

Assembler—

- 266—Assembler (Assembled) Provided with Oilite Bearings.
- 16—Assembler Chute Finger.
- 244—Assembler Chute Finger (D-3318).
- 133—Assembler Chute Front Rail.
- 19—Assembler Cover.
- 235—Assembler Slide Brake Facing.
- 241—Assembler Slide Finger.
- 59—Assembler Slide Spring.
- 247—Assembler Slide Spring Extension (Assb.).
- 272—Assembler Star-Friction Adjustable from Front.
- 289—Assembler Star Friction of New Construction.
- 190—Assembling Stick, Long Line.
- 250—Pivoting Front Assembling Guide (Model 29-30).
- 13—Quick Removable Star Wheel.
- 299—Two-Speed Assembler (New Design).

Assembler Entrance—

- 4—Assembler Entrance Cover, Hinged.
- 16—Assembler Entrance Flexible Buffer.
- 302—Assembler Entrance Flexible Buffer.
- 167—Assembler Entrance Plate Guide.
- 237—Assembling Guide (No. 24) (Lower).
- 149—Revolving Front Guide Holder.
- 102—Revolving Front Guide Holder Locking Lever.

Assembling Elevator—

- 59—Assembling Elevator.
- 276—Assembling Elevator and Delivery Slide.
- 15—Assembling Elevator (42 em).
- 22—Assembling Elevator Back Buffer.
- 79—Assembling Elevator Duplex Rail Cap.
- 104—Assembling Elevator Em Scale (42 em).
- 282—Assembling Elevator Gate Handle.
- 7—Assembling Elevator Gate Handle.
- 189—Assembling Elevator Gate and Back Rail.

- 275—Assembling Elevator Gate Operating Cam (Self-Quadder).
- 194—Assembling Elevator Hand Stick.
- 301—Assembling Elevator Lever Shaft Sleeve.
- 107—Assb. Elevator Matrix Lug Support Rail.
- 296—Assembling Elevator Matrix Retaining Rail.
- 157—Assb. Elevator Matrix Support Rail Cam.
- 71—Assembling Elevator, Offset.

Delivery Slide—

- 279—Assembling Elevator and Delivery Slide.
- 23—Delivery Air Cushion Vent.
- 170—Delivery Channel Hand Stick.
- 305—Delivery Lever Bushing.
- 144—Delivery Lever Link.
- 236—Delivery Lever Link (L.H. Section).
- 29—Delivery Slide.
- 9—Delivery Slide Long Finger.
- 20—Delivery Slide Short Finger.
- 258—Improved Delivery Slide Long Finger (Self-Quadder).

Distributor and Channel Entrance—

- 284—Adjustable Distributor Screw Clutch Spring.
- 143—Channel Entrance, Auxiliary.
- 160—Channel Ent. Frame Control Lever, Long.
- 283—Channel Entrance Locating Block.
- 197—Channel Entrance Spring.
- 225—Channel Entrance Partitions.
- 273—Channel Entrance Partitions (Fender).
- 173—Distributor Bar and Shifter Slide Bracket.
- 64—Distributor Box Chute.
- 285—Distributor Box Matrix Guard (Assb.) Distributor Screw Guard Lever (Assb.) and Automatic Matrix Guard.
- 119—Distributor Box Separating Blocks (Wide Tooth Matrices).
- 86—Distributor Box, Upper, Lower Rail.
- 109—Distributor Clutch Balancing Spring.
- 114—Distributor Clutch Lever.
- 280—Distributor Clutch Pulley.
- 93—Distributor Clutch Pulley Screw.
- 246—Distributor Clutch Pulley Washer Flange and Washer (Model 29-30).
- 32—Distributor, Primary, Clutch Shaft.
- 111—Distributor Screw Gear Pin, Oversize.
- 61—Distributor Screw Gear Guard.
- 73—Distributor Shifter Slide Latch.
- 10—Dist. Shifter Slide Link Cushion Spring.
- 21—Distributor Shifter Slide Link, Wide.
- 76—Dist. Shifter Slide Stop Lock Washer.
- 49—Distributor Shifter Slide Stop Stud.
- 291—Revolving Channel Entrance Safety Block.
- 300—Universal Distributor Box Part.

Double Quadding and Centering Device (Self-Quadder)—

- 158—Assembling Elevator Matrix Retaining Strips and Stud Keeper.
- 101—Double Quadding and Centering Device.
- 281—First Elevator Jaw Duplex Rail Lever Plate.
- 208—First Elevator Jaw Matrix Detent.
- 146—First Elevator Jaw (Detent) Spring Pawl Keeper.
- 140—First Elevator Jaw Line Stop.
- 217—Fixed Indentation.
- 234—Justification Release Cam Lever Rod Spring (Assb.).
- 245—Justification Release Cam Lever Rod Stud.
- 293—Justification Release Cam Lever Spring.
- 287—Justification Rod (R.H.) Stop Stud.
- 159—Oil Hole Covers Added.
- 139—Pump Stop Lever Operating Lever.

- 206—Pump Stop Lever Operating Lever Adjusting Shoe.
- 259—Vise Jaw Bevel Pinion Guard (Upper) and (Lower).
- 163—Vise Jaw Control Rod Latch.
- 304—Vise Jaw Control Rod Latch Rack Slide Handle Support.
- 248—Vise Jaw Control Rod Lever Banking Plate.
- 148—Vise Jaw, Left Hand.
- 218—Vise Jaw (L.H. and R.H.) Block.
- 204—Vise Jaw Locking Toggle Release Lever Latch.
- 215—Vise Jaw (L.H.) Safety Detent.
- 253—30-Em Vise Jaw Locking Toggle Release Lever and Vise Jaw Locking Toggle Adjusting Screw Block.

Escapement—

- 137—Escapement, Auxiliary, Lever Guide (Adjusting Screws).
- 175—Escapement and Auxiliary Escapement Lever Guide (Adjusting Bushings).
- 260—Escapement Verge Plunger.

First Elevator—

- 230—Automatic Sliding Line Stop for Linotypes without Self-Quadder.
- 274—Automatic Sliding Line Stop for Linotypes without Self-Quadder.
- 110—First Elevator Jaw, Front and Back.
- 77—First Elevator Jaw Duplex Rail.
- 31—First Elevator Jaw Line Stop.
- 25—First Elevator Lever Link Lock Nut.
- 303—First Elevator Lever Link Spring.
- 105—First Elevator Slide Filling Piece Stud Knob.
- 224—First Elevator Slide Safety Stop Plate.

Keyboard—

- 99—Em, En, Thin Space Mechanism.
- 202—Keyboard Cam Rubber Roll.
- 264—Keyboard Cam Rubber Roll Shaft Brackets, Provided with Oilite Bearings.
- 226—Keyboard Cam Yoke Trigger Hinge Bracket.
- 183—Keyboard Cams (Model 5).
- 239—Keyboard Key Lever Safety.
- 209—Keyboard Pivot Screw.
- 161—Keyboard Rod Lever Slide Reversing Lever Mechanism.
- 166—Keyboard Rod Shift Key and Extension.
- 103—Key Shift Magazine Mechanism.
- 68—Keyboard Rubber Roll (Ceylon).
- 70—Keyboard Rubber Roll Assembling Tool.
- 8—Keyboard Rubber Roll Shaft.
- 6—Keyboard, Swinging.
- 95—Keybuttons, Maroon, 55-72 Character.
- 214—Multiple Keyrod Bracket (Assembled).
- 69—Multiple Keyrod Shifter Lever Handle.
- 142—Multiple Keyrod Shifter Lever Handle.
- 141—Multiple Keyrod Shifter Lever Stop.
- 162—Multiple Keyrods.
- 24—Spaceband Key Locking Bar.

Knife Block and Wiper—

- 1—Knife Block (Auxiliary Lever and Cam).
- 116—Knife Block (Knob).
- 297—Knife (R.H.) Block (Advertising).
- 260—Knife (R.H.) Block (Adv.) (Assb.) Provided with Quick-Opening Feature.
- 80—Knife, Right Hand, Lever Detent Spring.
- 43—Knife, Right Hand, Lower Lever.
- 210—Knife (R.H.) Sector Turn Knob and Releasing Collar.
- 90—Knife, Right Hand, Slug Plate.
- 216—Knife (R.H.) Spring Plate and Knife (R.H.) Slug Plate.
- 14—Knife Wiper.
- 89—Knife Wiper Bar Rod.

Linotype Improvement Sheets Index (Continued)

Knife Block and Wiper—Cont.

- 81—Knife Wiper Bar Rod Operating Stud.
- 85—Knife Wiper Lever Roll Bracket.
- 82—Knife Wiper Operating Lever.
- 278—Means to Automatically Regulate the Stroke of the Knife Wiper when Changing the Casting Position.
- 262—Point Scale on Knife Block (Assb.) (Knob Type).

Magazine—

- 92—Magazine, Auxiliary, Clamping Pin and Bracket.
- 128—Magazine Front Card Holder Clips.
- 17—Magazine Locking Device.
- 11—Magazine Frame, New Style.
- 196—Magazine Frame Supporting Frame Elevating Handle (Assembled).
- 96—Magazines, Linolite.
- 154—Magazines, Three-Quarter Length.
- 152—Magazine Supporting Arms (Clearances Added).
- 72—Magazine Supporting Arms (Spring Dents Added).
- 243—Not-Mixing Between Auxiliary Magazines Two and Three (Model 30, Four Magazine).
- 254—Three-Quarter Length Magazines.

Molds and Liners—

- 242—Mold Banking Block, for Use on Six-Pocket Mold Disk.
- 126—Mold Cap Ribs.
- 37—Mold Liner Pulling Slot.
- 36—Mold, Recessed, Auxiliary Rib.

Pi Stacker and Chute—

- 49—Pi Chutes.
- 78—Pi Stacker, 4-Deck, Model 9.
- 33—Pi Stacker.
- 62—Pi Stacker Tube Clip.
- 18—Sorts Tray Swinging Bracket, Model 26.

Pot (Gas and Electric)—

- 282—Gas Pressure Regulator.
- 113—Magnet Switch Kickout Coil.
- 294—Micro-Therm Gas Pot Control.
- 276—Micro-Therm Toggle Switch Wires.
- 298—Oversize Pot Pump Cam Roll.
- 100—Pot Crucible Vertical Mouthpiece Wiper.
- 268—Pot Crucible Vertical Mouthpiece Wiper (30 and 42 Em).
- 177—Pot, Electric, Control Panel Switch.
- 118—Pot, Electric, Outside Terminal Box.
- 75—Pot, Electric, Thermostat.
- 83—Pot, Electric, Thermostat Attachment (Tools for Applying).
- 190—Pot, Electric, Thermostat Rod.
- 94—Pot, Electric, Thermostat Splash Guard.
- 115—Pot, Electric, Therm. Term. Block Cover.

- 45—Pot Feeder Housing.
- 59—Pot Feeder Housing (Electric).
- 50—Pot Feeder Latch Rod Spring and Stud.
- 172—Pot Feeder Splash Guard.
- 47—Pot Feeder Trip Bracket.
- 84—Pot Gas Burner Tip.
- 2—Pot Leg Bushings.
- 184—Pot Leg Cap.
- 129—Pot Pump Lever.
- 195—Pot Pump Lever Spring.
- 238—Pot Pump Lever Stop Lever Operating Lever Short Line Safety Attachment.
- 87—Pot Pump Locking Pin Keeper.
- 130—Pot Pump Plunger Rod Hinge Pin Catch.
- 185—Pot Pump Plunger Rod Sleeve.
- 240—Pot Pump Plunger Safety Device (for 30-em Machines arranged for 18-24 point Two-Letter Matrices).
- 60—Pot Return Cam.
- 63—Pot Well Brush.
- 179—Pot Well Brush.
- 176—Thermostat Expansion Tube Rod Lever.
- 187—Thermostat Valve Lever.

Second Elevator—

- 91—Second Elevator Bar Delivery Pawl.
- 227—Second Elevator Bar Plate and Link.
- 38—Second Elevator Safety Pawl Stud.

Slug Lever and Galley—

- 46—Galley and Galley Rail.
- 74—Galley, Reversible.
- 3—Slug Lever.
- 193—Slug Lever (Operated from Cam on First Elevator Slide).
- 213—Slug Lever Buffer.
- 147—Slug Lever Connecting Rod.
- 120—Slug Lever Spring.

Spaceband and Spaceband Box—

- 201—Spacebands.
- 67—Spaceband Box Chute.
- 112—Spaceband Box Lock and Key Lever Guide.
- 173—Spaceband Buffer Finger.
- 292—Spaceband Cam Stop Pin and Spaceband Cam.
- 252—Spaceband Chute Plate (Long).
- 277—Spaceband Lever Pawl.
- 251—Spaceband Lever Pawl Guide.
- 233—Spaceband Lever Pawl Guide Rail (Assb.).
- 188—Spaceband Lever Pawl Rail Guide.
- 52—Spaceband, Special Taper.
- 108—Spaceband, Wide Range.
- 98—Spacebands, Identification Lines on.

Transfer—

- 57—Spaceband Lever Pawl Guide Piece (42 em).
- 12—Transfer Channel Plates.
- 26—Transfer Channel Plate Aligning Pieces.
- 42—Transfer Front Plate and Quad Box.
- 54—Transfer Slide Finger.

Vise—

- 30—Knife, Back, Adjusting Screw.
- 66—Mold Disk (Increased Cooling) 42 em.
- 212—Mold Disk, Six Pocket (Water Cooled) 30 em.
- 229—Mold Disk Guide Support Screw and Lubricator.
- 44—Mold Disk Locking Stud Block Wiper.
- 191—Mold Disk Locking Stud Block (R.H.).
- 270—Mold Disk Locking Stud Block (R.H.).
- 40—Mold Disk Spring Buffer.
- 85—Mold Slide Spring Buffer, adjustable.
- 34—Mold Wiper, Back.
- 41—Mold Wiper, Back (42 em).
- 127—Vise Closing Lever Spring.
- 192—Vise Justification Bar and Brace.

Vise Jaws—

- 256—First Elevator Jaw (Back).
- 261—First Elevator Jaw Duplex Rail Banking Plate.
- 255—First Elevator Jaw Line Stop Transfer Rod Guide.
- 131—Vise Jaw, Left Hand.
- 232—Vise Jaw (L.H.) Adjusting Bar (Self-Quadder) and Vise Jaw (L.H.) Adjusting Bar Extension (Self-Quadder) (30-42 em).
- 27—Vise Jaw, L.H., Adj. Rod Locking Pin.
- 51—Vise Jaw, Left Hand, Detent.
- 121—Vise Jaw, Left Hand, Wedge Spring.
- 228—Vise Jaw, L.H., Wedge Adjusting Screw and Hinge Pins.
- 53—Vise Jaw, Right Hand, Anti-Friction Roll.

Miscellaneous—

- 295—Air-Cooled Mold Blower.
- 263—Auxiliary Shift Keyputton Device.
- 28—Cam Roll Pin.
- 88—Ejector Blade Controller Lever.
- 58—Ejector Cam Lock Washer.
- 95—Ejector Lever Link and Ejector Slide.
- 171—Four Point Slug Attachment.
- 198—Knife (Back) Waste Metal Chute.
- 257—Loose Pulley for Taking Up Slack of Matrix Delivery Belt.
- 290—Matrix Indicator.
- 65—Matrix Notching, Model 9 and 24.
- 265—Method of Stopping at Casting Point by Independent Control.
- 124—Mohr Lino Saw (For Self-Quadder).
- 205—Mold Cam Screw Driver.
- 286—Mold Disk Pinion Flange.
- 155—Mold Turning Square Block Shaft Oil Hole Cover.
- 123—Motor Bracket for G.E. and Cline Motors.
- 186—Oil Hole Covers added.
- 267—Oilite Bearing for Matrix Delivery Belt Idle Pulley.
- 271—Safety to Provide Against Pulling Mold Disk Out Too Far.
- 211—Two-Letter Attachment, 18-24 Point.